

System Update Procedure of the CD-2e

2008 JULY (REV1)

First of all ...

Please check the version number of your CD-2e. Turn on the power while holding down the [MENU] button, after the “Roland CD-2e SD/CD Recorder” screen appears, the system version will be shown. If the version number is same or later than the update program, the system update is not necessary.

Contents

[1] Update procedure using a SD memory card

- 1-1 Required items
- 1-2 Preparations of the SD card
- 1-3 Update the system software of CD-2e

[2] Update procedure using a CD-R/RW

- 2-1 Required items
- 2-2 Preparations of the CD-R/RW disc
- 2-3 Update the system software of CD-2e

Caution when performing the update (Important!)

Never power-off your Fantom-G6/G7/G8 while the update is in progress!

[1] Update procedure using a SD memory card

1-1 Required items

- CD-2e
- AC adaptor included with the CD-2e
- A SD memory card formatted by the CD-2e
- A computer and the accessories to write to SD memory card

1-2 Preparations of the SD card

1. Put the downloaded cd2e_v1100.zip onto your computer's suitable directory and open the file.
2. Copy the “CD2EPROG.BIN” file onto the root directory of the SD memory card.
* Please never change the file name.
3. Un-mount the SD memory card using the correct procedure, then disconnect from computer.

1-3 Update the system software of CD-2e

[NOTE] Please keep power on with AC adaptor and do not turn off while the update is in progress.

1. Insert the SD card to the CD-2e's SD memory card slot.
2. Turn on the power while holding down the [SD CARD] button.
Keep holding the button, update data is loaded from SD card to CD-2e, the [ENTER] and [EXIT] button blink with the following display, then release the [SD CARD] button.

FLASH UPDATER
Update FLASH?

3. Press the [ENTER] button to continue the update(*).
The following is displayed. * To cancel at step 2, press the [EXIT] button.

FLASH UPDATER
Init PARAM area?

4. Press the [EXIT] button if you want to keep the user parameters, or press the [ENTER] button if you want to return them to the factory-set condition.
System update is started, the display transits as "Erasing .." "Writing .." then "Verifying ..."
5. Finally the following is displayed. Please turn the CD-2e's power off.

Update OK
Please turn off

6. To check the version number, turn on the power while holding down the [MENU] button.
After the "Roland CD-2e SD/CD Recorder" screen appears, the system version will be shown.

[2] Update procedure using a CD-R/RW

2-1 Required items

- CD-2e
- AC adaptor included with the CD-2e
- A CD-R/RW disc
- A computer compatible to CD-R/RW
- Application software to write CD-R/RW in ISO9660 format

2-2 Preparations of the CD-R/RW disc

1. Put the downloaded cd2e_v1100.zip onto your computer's suitable directory and open the file.
2. Copy the "CD2EPROG.BIN" file onto the root directory of CD-R/RW and burn the disc with writing software.
 - * Please never change the file name.
 - * Write the CD-R/RW in ISO9660 format. The CD-2e may not read CD-R/RW written in the other formats.
 - * For more detail of CD-R/RW writing/burning, please refer to the owner's manual of your computer and application software.

2-3 Update the system software of CD-2e

1. Turn on the power while holding down the [CD] button, the following is displayed, then release the [CD] button.

CD UPDATE MODE

2. The display changes as the following then insert the CD-R/RW to the CD-2e's CD drive.

CD UPDATE MODE
Insert update CD

3. The update data on CD-R/RW is loaded automatically to CD-2e. If the loading is completed, the [ENTER] and [EXIT] button blink with the following display.

FLASH UPDATER
Update FLASH?

The CD-R/RW is ejected automatically at this step.

4. Press the [ENTER] button to continue the update(*). The following is displayed.

FLASH UPDATER
Init PARAM area?

*To cancel at step 3, press the [EXIT] button.

5. Press the [EXIT] button if you want to keep the user parameters, or press the [ENTER] button if you want to return them to the factory-set condition. System update is started, the display transits as "Erasing .." "Writing .." then "Verifying ..."
[NOTE] Please keep power on with AC adaptor and never turn off during this steps.

6. Finally the following is displayed. Please turn the CD-2e's power off.

Update OK
Please turn off

7. To check the version number, turn on the power while holding down the [MENU] button. After the "Roland CD-2e SD/CD Recorder" screen appears, the system version will be shown.

Copyright © 2008 ROLAND CORPORATION

No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.